



## HD WiFi Indoor / Outdoor Camera Kit Quick Start Guide

### 1 Mobile Setup

This quick start guide will help you configure your WiFi camera kit for initial use. Before performing any permanent installation, we recommend that you complete the mobile setup in Section 1. Connect your cameras and make sure that nothing was damaged during shipping.


#### Before you begin:

- Plug in and power on all cameras near your router for initial setup. Fasten the antennas (if applicable) onto the cameras.
- Make sure that you have a strong WiFi connection at the location of your cameras.
- Make sure you know the SSID (WiFi network name) and password of the **2.4GHz WPA-PSK/WPA2-PSK WiFi network** that you want your cameras to connect to. Your network cannot be hidden.
- Make sure your network has at least 2Mbps upload speed for each camera when live viewing or 4Mbps upload speed for each camera when using the cloud service.
- Download and install the Smartz Eaze™ app from the Google Play™ or the App Store™ (compatibility: iOS™9.0+ or Android 4.0+). Launch the app and sign up for a free account. All of your devices will be bound to this account.




We are constantly working to improve our product and app. Please visit [www.zmodo.com/support](http://www.zmodo.com/support) for updated instructions, manuals, and more.


1

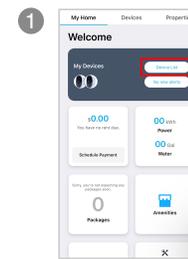

Log in and press the "Device List" button on the My Home page.

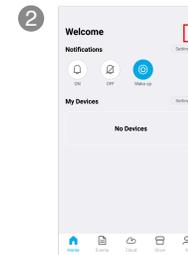


Press the **+** button in the upper right corner of the Devices page to begin the setup process.

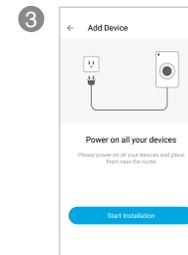


Power on your device(s). The status light will be solid green when booting up, then flashing green when the device is ready for setup. Tap "Start Installation" to proceed.


2

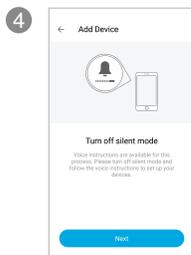

Turn up the volume on your phone for voice prompts during the mobile setup process. Tap "Next" to proceed.

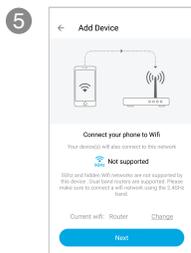

Connect your phone to the 2.4GHz WPA-PSK/WPA2-PSK WiFi network that you want your device(s) to connect to (network cannot be hidden). Tap "Next" to proceed.

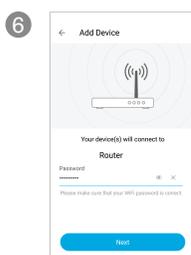

Enter the password of the WiFi that you want your device(s) to connect to. Make sure that your WiFi password is correct. Tap "Next" to proceed.


Note: The WiFi password is case-sensitive.

3




Steadily hold your phone's display in front of your Zmodo camera until you hear "device connected". The distance between your phone and the camera should be about 8 inches.

Note: If you're setting up multiple devices, you will only need to scan the QR code with one of your devices.

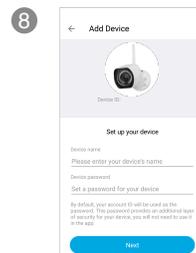

Name your device and set a password for it. Tap "Next" to proceed.

Note: The password provides an additional layer of security for your devices. You will not need to use this password when accessing your devices from the Smartz Eaze app. It is not required, but it is highly recommended.

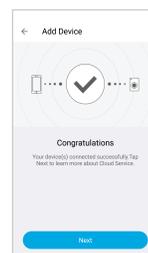

Your device(s) have been successfully configured! Tap "Done" to finish. You can now share or view your device(s).

4


### 2 Mounting Your Cameras Installation Requirements & Tips:

- If you're installing your cameras outdoors, all wired connections must be weatherproofed.
- Before installing the cameras, carefully plan where and how they will be positioned, and how you will route the wiring that connects your cameras to the power adapters.
- Try to avoid WiFi signal interference from concrete, cement, and metal as much as possible. Do not place cameras in a location where these materials stand between your cameras and your WiFi router.
- Make sure that your cameras are within range of your WiFi network, and that your network meets all of the bandwidth requirements from Section 1.
- If you have a lot of obstacles between your camera and the WiFi router, the transmission range will be greatly reduced. In order to increase the range, you may purchase a WiFi range extender to place near the cameras.

- 1 Unplug the cameras that have been configured in Section 1.

5

- 2 Align the camera against the wall where you would like to mount it, and mark the appropriate holes. Drill three holes smaller than the wall anchors and use a hammer to insert the anchors into the wall. Fasten three screws through the holes on the bracket as shown.

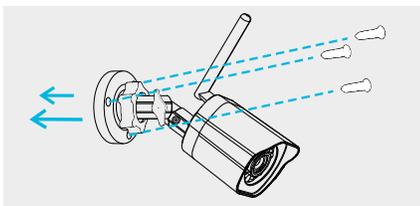


- Camera may be installed to ceiling rotated at 180 degrees as shown below.
- If installed this way, enable "Screen Inverted" in the Smartz App.




- 3 You will be able to adjust the camera position using the adjustable camera bracket. The bracket features three points of articulation. See the following diagrams for examples. Position the camera for an optimal viewing angle, and tighten the bracket.

6

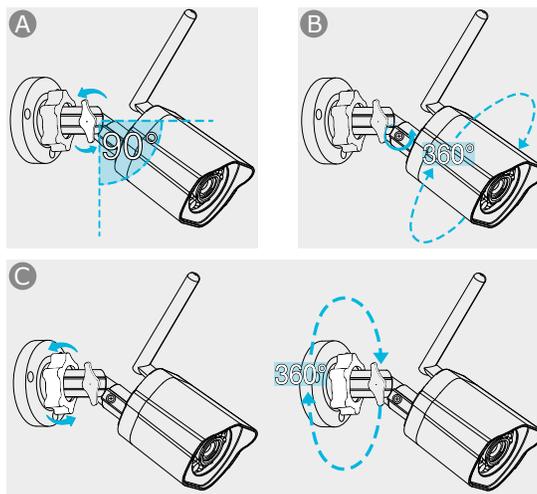

- 4 Connect the supplied power adapter to the power port on the camera, and plug the adapter into a nearby power outlet. Repeat steps 1-4 for all cameras.

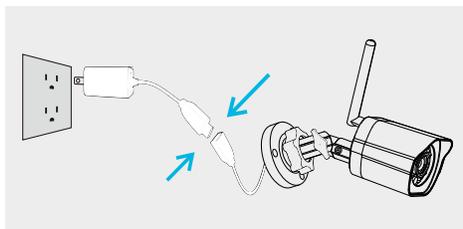

7

## 3 Recording and Viewing Options

### Recording Options

This device is compatible with the cloud service. Please visit for more [www.zmodo.com/support](http://www.zmodo.com/support) information and articles. The cloud service will allow you to:

- Record continuously and store footage on our secure cloud servers.
- Create and save video clips from your recordings.
- Access your footage and clips at any time from any location.
- Enjoy more smart features in the future!

### Viewing Options

All of your devices will be bound to your user account. You can access your camera(s) and other devices by using the Smartz Eaze app with any Android™ or iOS™ device. Download the app from the Google Play™ or the App Store™.

You can also access your devices from any web browser with our web app. Visit [user.zmodo.com](http://user.zmodo.com) and log in with your user account information.

8

## 4 Status Light Definitions

Your camera has an LED light that indicates the status of the camera. Please refer to the guide below:

- **Solid green**  
The camera is powering on.
- **Blinking green**  
The camera is ready for setup.
- **Blinking blue**  
The camera is connecting to the WiFi network. Please do NOT turn off or unplug the power supply.
- **Solid blue**  
The camera is online.
- **Solid purple**  
The camera is upgrading. Please do NOT turn off or unplug the power supply.

9

## 5 Troubleshooting

If you were unable to connect your camera successfully:

- Make sure that you are connecting to a 2.4GHz WPA-PSK/WPA2-PSK WiFi network, and your network is not hidden.
- Please make sure that you entered the network name and password correctly. Note: Both are case-sensitive.
- During the QR code scan, please make sure that your phone's display brightness is high, and avoid glare on your phone's display.
- Make sure that you have fastened the antenna onto your camera, and try moving your camera closer to the router for the initial setup.
- Make sure "Location" is on for the phone and that the location permission is allowed for the app during setup.

(Setting up multiple cameras) If you were able to connect some, but not all of your cameras:

- Power cycle the camera(s) that are not connected to the WiFi and repeat the setup process.

Note: You can check the status light of the device to see if it has been successfully connected to the WiFi or not. If the status light is blinking green, it means that it has not connected to a WiFi network. If it is solid blue, it means that it is already connected to the WiFi network.

10

## 6 Support

### Having difficulty?

You can use the Live Chat function in the Smartz Eaze app if you have any technical problems.

Please follow the steps below:  
Access the "Me" page in the lower right corner in the Smartz Eaze app and select "Contact Support".

For more instructions, troubleshooting, support, and other resources, please visit:

[www.zmodo.com/support](http://www.zmodo.com/support)



Like us on Facebook.com/Zmodo



Follow us on Twitter @Zmodo

Android is a trademark of Google Inc. Google Play is a trademark of Google Inc. Apple, the Apple Logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

11